

Linear encoder closed-loop setup

Read more about the topic in the [MyCNC closed loop configuration manual](#).

Linear encoders are typically used on higher-end machines to allow for a more precise monitoring of the difference between the real and the expected machine position (incremental change from the absolute position). This article focuses on the linear encoder setup and on the methods to make the information obtained from the encoders useful within the myCNC software.

The following window is available upon navigating to Settings > Config > Hardware > Encoders:

	#0	#1	#2	#3	#4	#5	#6	#7	#8	#9
Encoder Resolution	2500	2500	2500	2500	2500	2500	512	512	512	512
Current value	9999	9999	9999	0	0	0	0	0	0	0
Z position	0	0	0	0	0	0	0	0	0	0
Mul	0	0	0	0	0	0	0	0	0	0
/(2^Div)	1	1	1	1	1	1	1	1	1	1
Encoder Position	0	0	0	0	0	0	0	0	0	0
Position										
Linear Encoder Dimension	0.005	0.005	0.005	0.005	0.005	0.005	0.005	0.005		

The following settings are available:


- Encoder resolution for each particular encoder number.
- The current encoder value is displayed on this screen. This is the fastest way to check if the encoder is connected/working - for example, turning an MPG wheel handle should immediately change the current encoder value in this field for the selected encoder.
- Z-position
- Mul coefficients (multiplication value), and
- /(2^Div). These Mul and Div coefficients are used due to the fact that the controller cannot handle floating number data in calculations, therefore it is necessary to first multiply and then divide a number by certain coefficients. They are used to bring the value of the encoder in line with the pulses/unit value specified in the Axes/Motors tab. Larger numbers allow to reduce the error. For example, if the ratio between the Axes/Motors value and the encoder pulse/unit value is 3.5, then the multiplication value (Mul) can be set to 7, while Div can be set to 1 ($2^1 = 2$, $7/2 = 3.5$).
- Encoder position
- Position
- Linear encoder dimension. This should be set to the proper encoder dimension to convert the impulses from a linear encoder to mm (the most common values for this setting are 1 and 5

micrometers, as shown in the screenshot).

The following global variables deal with encoder values:

9000	<p>(+16) Registers represent Encoder values. Writing to this registers does not affect anything. Selected channel Current Encoder value will be returned when reading these registers. Reading these registers from the controller Hardware PLC will return actual Encoder value. Encoder values in the software are updated about every 128ms. This delay should be counted when using Encoder values from the Software PLC.</p> <p>9000 - Encoder #0 value 9001 - Encoder #1 value 9002 - Encoder #2 value 9003 - Encoder #3 value 9004 - Encoder #4 value 9005 - Encoder #5 value 9006 - Encoder #6 value 9007 - Encoder #7 value</p>
9200	+16. Reserved to display the encoder position on an infinite scale (no value turnover on every full encoder turn, instead the value will keep climbing indefinitely into the positives/negatives depending on where the encoder handle is spun)
9216	+16. Reserved to display the encoder position on an infinite scale WITH the current encoder dimension (to indicate the current encoder position)

These global variables allow to display encoder values on the main screen of myCNC profiles that are geared towards encoder setups (such as 1366M4E and 1366PE):

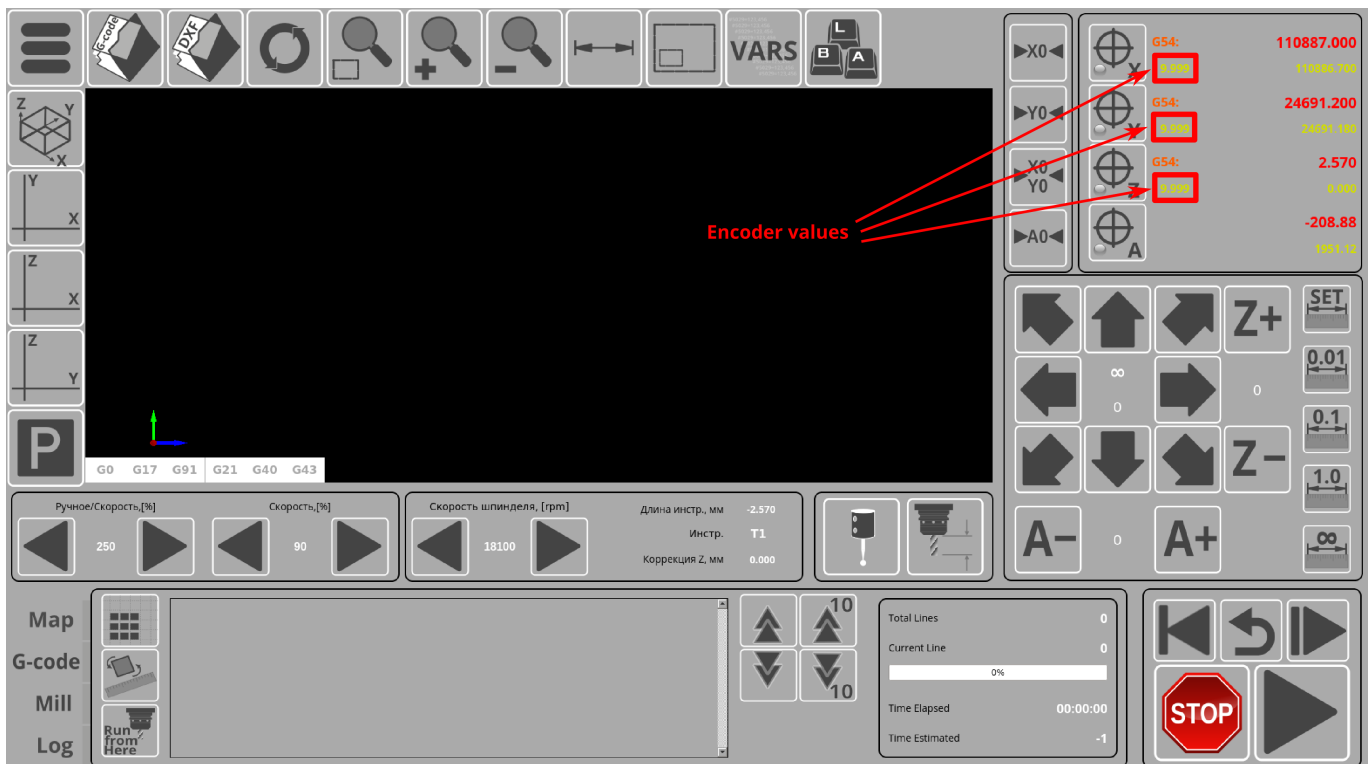

Step-by-step setup example

THIS SECTION OF THE MANUAL IS A WORK-IN-PROGRESS. Please contact the myCNC Support Team should any questions arise.


Going through the setup process for linear encoder feedback one step at a time:

1. In this step, we want to make sure that the PID number, motor output and encoder channel number are equal (the current implementation requires that they should always be “lined up” in such a manner)

For example:

PID	Motor	Encoder #
PID0	Motor0	Encoder0
PID1	Motor1	Encoder1
PID2	Motor2	Encoder2

It is possible to customize these arbitrarily, but as of the time of writing this manual (November 2020) it is strongly discouraged.

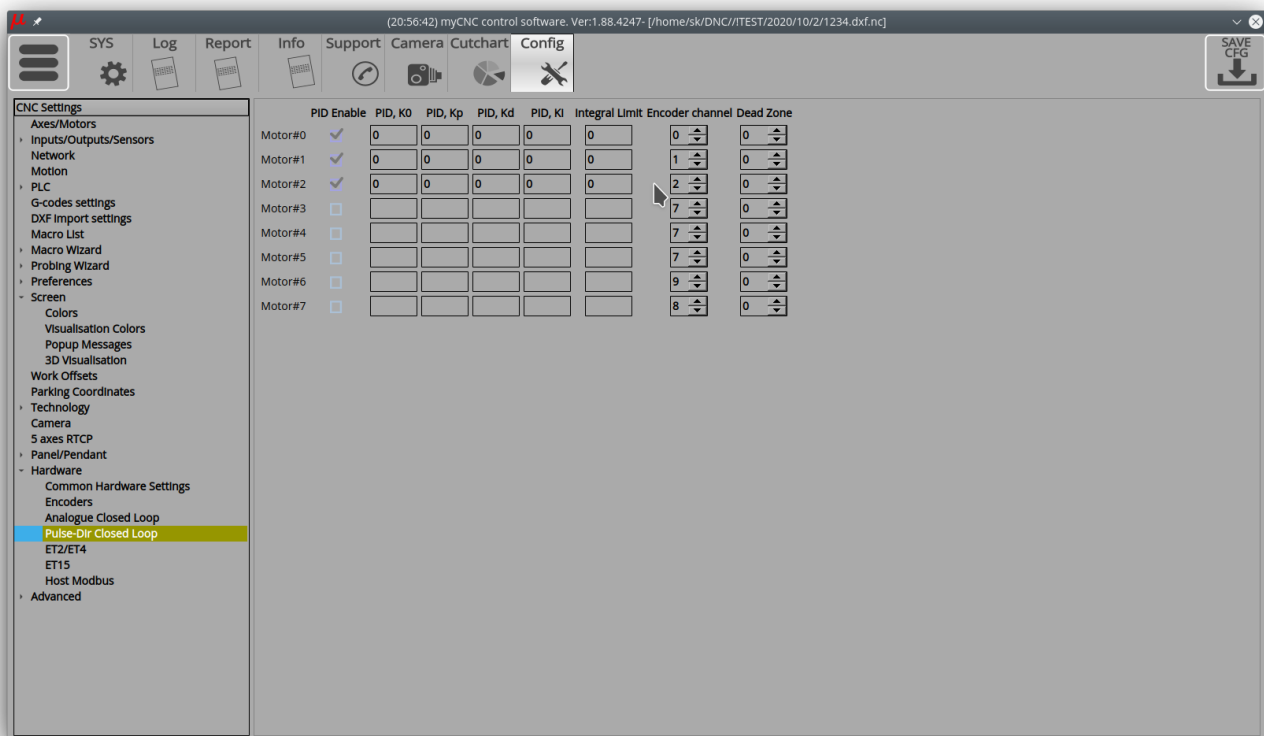

2. Registers for displaying the magnitude of the PID error are registers 9016, 9017, 9018, 9019, etc for PIDs 0, 1, 2, 3, etc respectively,

3. X1366M4E profile should be used when working with linear encoders and PIDs.

For PID tuning, it is recommended to output these registers to display the error value on the error indicator and on the corresponding “oscillograms” that will be visible to the user.

The following XML files are modified from the original implementation.

4. Error magnitude display is done via the following block of code in the coordinates-4.xml file

```
<!--Encoder values -->
<gitem where="x-coordinates" position="74;40" width="120" height="30"
```

```

displayAlignment="left;vcenter"
fgColor="##f-machinepos" format="%8.3f" fontFamily="Open Sans"
fontSize="16" type="display" deviation="0.0005"
name="display-cnc-gvariable-9016"
tooltip="Encoder error value for axis X"
bgColor="##b-display" displayWidth="120" fontStyle="bold"></gitem>

<gitem where="x-coordinates" position="74;100" width="120" height="30"
displayAlignment="left;vcenter"
fgColor="##f-machinepos" format="%8.3f" fontFamily="Open Sans"
fontSize="16" type="display" deviation="0.0005"
name="display-cnc-gvariable-9017"
tooltip="Encoder error value for axis Y"
bgColor="##b-display" displayWidth="120" fontStyle="bold"></gitem>

<gitem where="x-coordinates" position="74;160" width="120" height="30"
displayAlignment="left;vcenter"
fgColor="##f-machinepos" format="%8.3f" fontFamily="Open Sans"
fontSize="16" type="display" deviation="0.0005"
name="display-cnc-gvariable-9018"
tooltip="Encoder error value for axis Z"
bgColor="##b-display" displayWidth="120" fontStyle="bold"></gitem>

<gitem where="x-coordinates" position="74;200" width="120" height="30"
displayAlignment="left;vcenter"
fgColor="##f-machinepos" format="%8.3f" fontFamily="Open Sans"
fontSize="16" type="display" deviation="0.0005"
name="display-cnc-gvariable-9019"
tooltip="Encoder error value for axis A"
bgColor="##b-display" displayWidth="120" fontStyle="bold"></gitem>

```


In the current version, registers 9232, 9233, etc are used instead (you may need to edit your XML file if using an older version).

5. Display of the error graphs is done via editing the `x-bottab-left-mill.xml` file. In general, the `myscope` type is responsible for displaying oscillograms. For older profiles, find and correct the displaying 3 graphs with variables 9016, 9017, 9018 (for PID0, PID1, and PID2 errors)

```

<gitem where="x-graph" position="10;10" width="880" height="380"
name="myscope1" type="myscope" yrange="-300;300" K="1"
source="cnc-gvariable-9016;cnc-gvariable-9017;cnc-gvariable-9018"
sampling="50" />

```


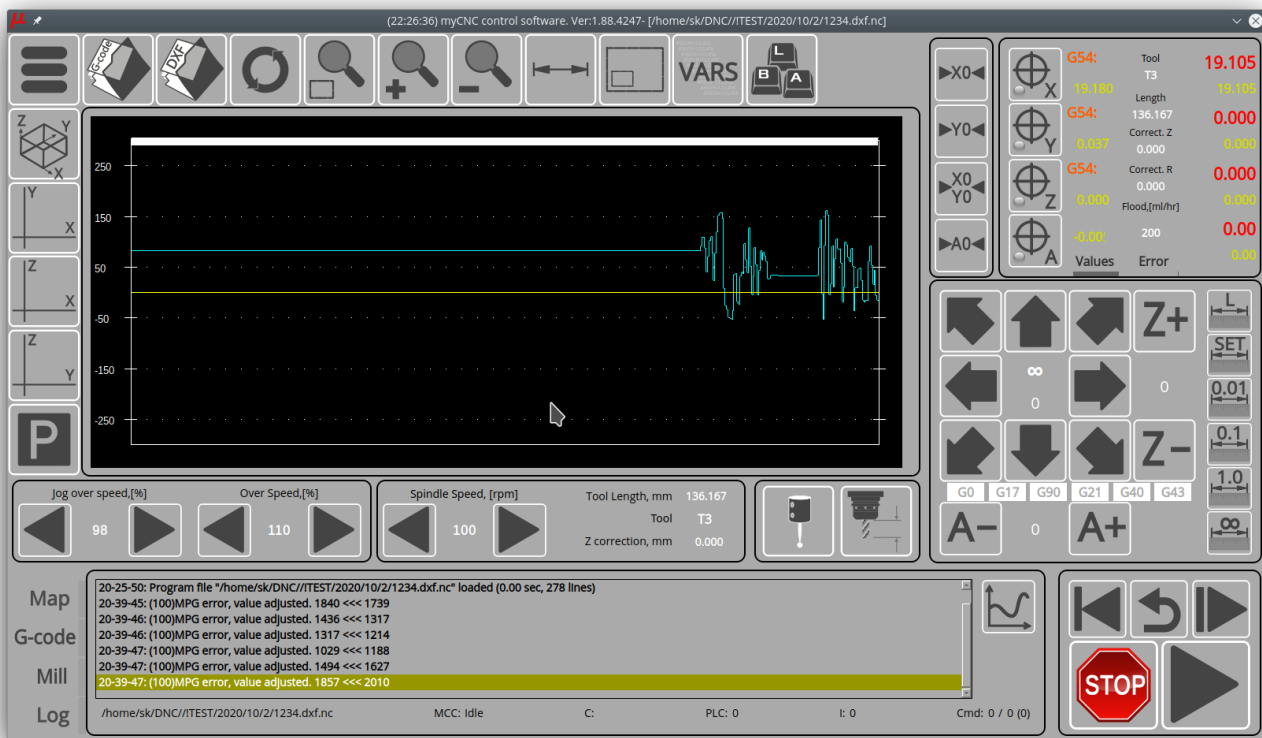


6. In order for registers 9016, etc to show an error, the PID must be enabled.

This requires 2 steps - 1) Check the Enable setting in the PID settings pulse-dir closed-loop 2) Start the Servo-ON procedure by writing "1" to register 60000

```
gvarset (60000,1); // run Servo ON procedure
```

For automatic servo on procedure, this line can be added to `_HANDLER_INIT`. For manual start, there is a Servo-ON button, which, in turn, starts the `_HANDLER_SERVO_ON` procedure. In it, in turn, is the necessary command to write to the in the register (after any other required actions, for example, after sending the Servo-ON signals to drives, etc.)

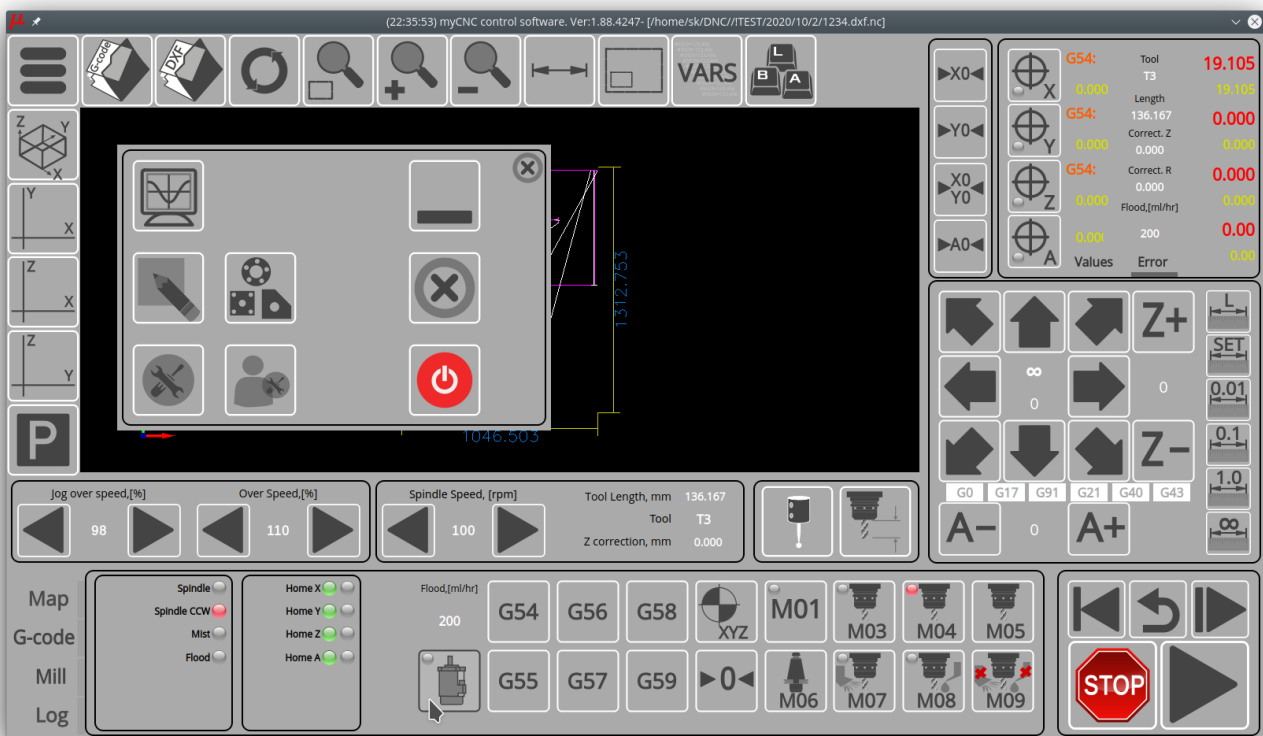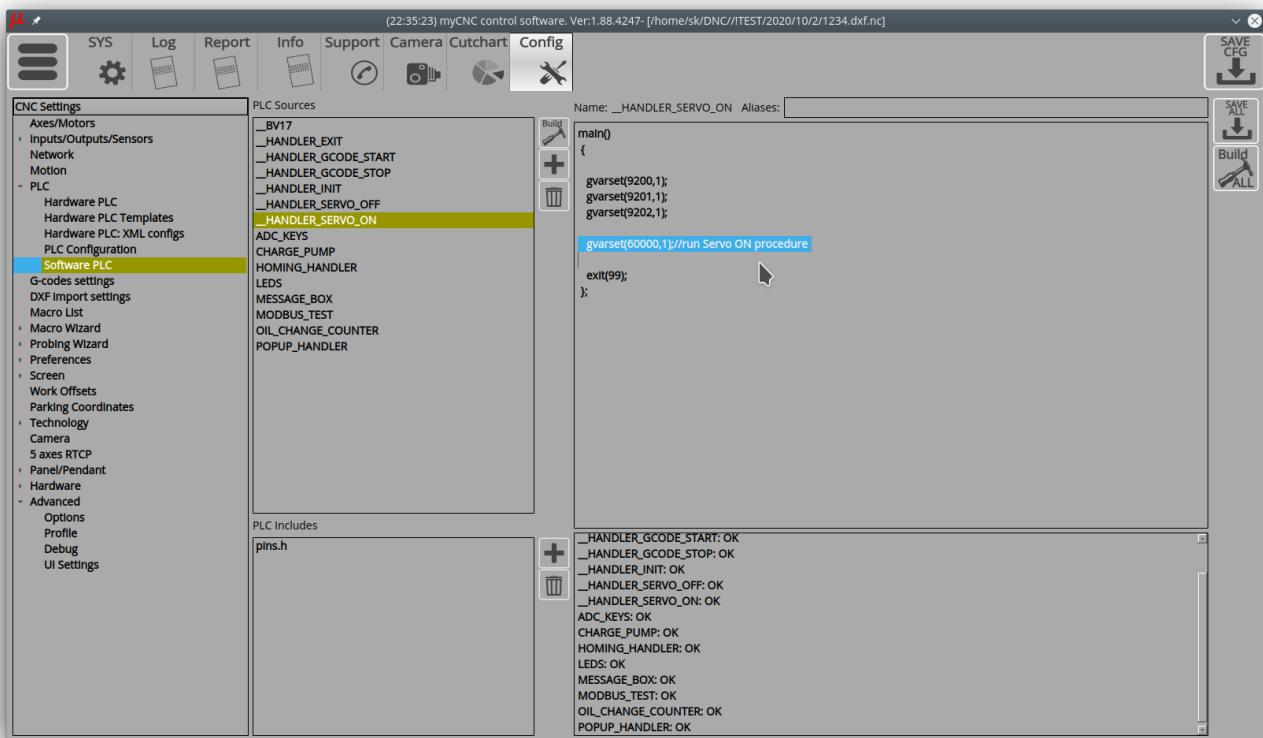

By means of a multiplier and a divider, the “software” resolution of the linear encoder must be brought to be in the “pulse-per-mm” units. In the “Linear Encoder Dimension” field, you must specify the resolution taking into account these factors and divisors, after which the controller will then operate with this program value.

If the PIDs are turned off and not used, but you simply need to have a position indication, then a different set of registers is used for display, and the multiplier and divider fields are not used. If that is

the case, then the real resolution of the linear encoder is indicated in the “Linear Encoder Dimension”. At this point, it is necessary to input the correct coefficient “K” for displaying graphs and error values.

From:

<http://docs.pv-automation.com/> - **myCNC Online Documentation**

Permanent link:

http://docs.pv-automation.com/mycnc/linear_encoder_setup

Last update: **2021/03/11 15:06**

