

Modbus Devices available

The following Modbus devices are currently available:

- WP8025ADAM
- WP8026ADAM
- WP8027ADAM
- WP8028ADAM
- WP9038ADAM

The devices differ in the number of digital or analog inputs/outputs. Below is a table with the description for the Modbus devices currently sold through the [myCNC shop](#):

Device	Description
WP8028ADAM	8 digital inputs, 8 digital outputs
WP8027ADAM	16 digital outputs, 0 inputs (write-only)
WP8026ADAM	16 digital inputs, 0 outputs (read-only)
WP8025ADAM	8 relay outputs (normally open)
WP9038ADAM	6 analog inputs, 4 digital inputs, 4 digital outputs. The digital inputs/outputs work similarly to the WP8028

 
The main features of each of the Modbus devices are listed below:

WP8025ADAM




- 8 relay outputs Modbus device
- Relay contact capacity: 2A/250VAC, 2A/30VDC
- External power supply: DC 9V-30V/2W
- 125x73x35mm

Relay output diagram:

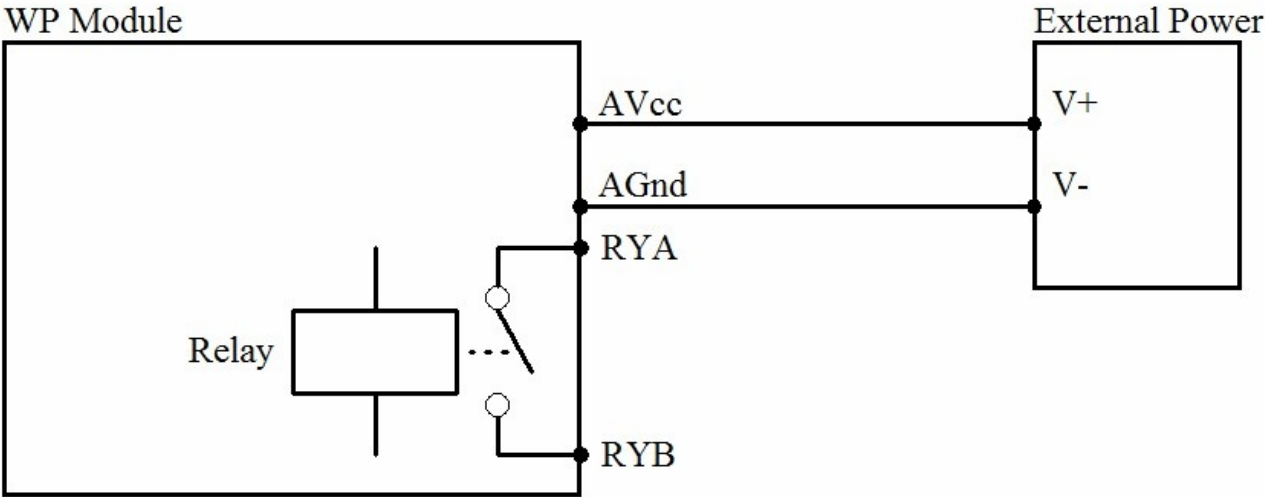


WP8026ADAM

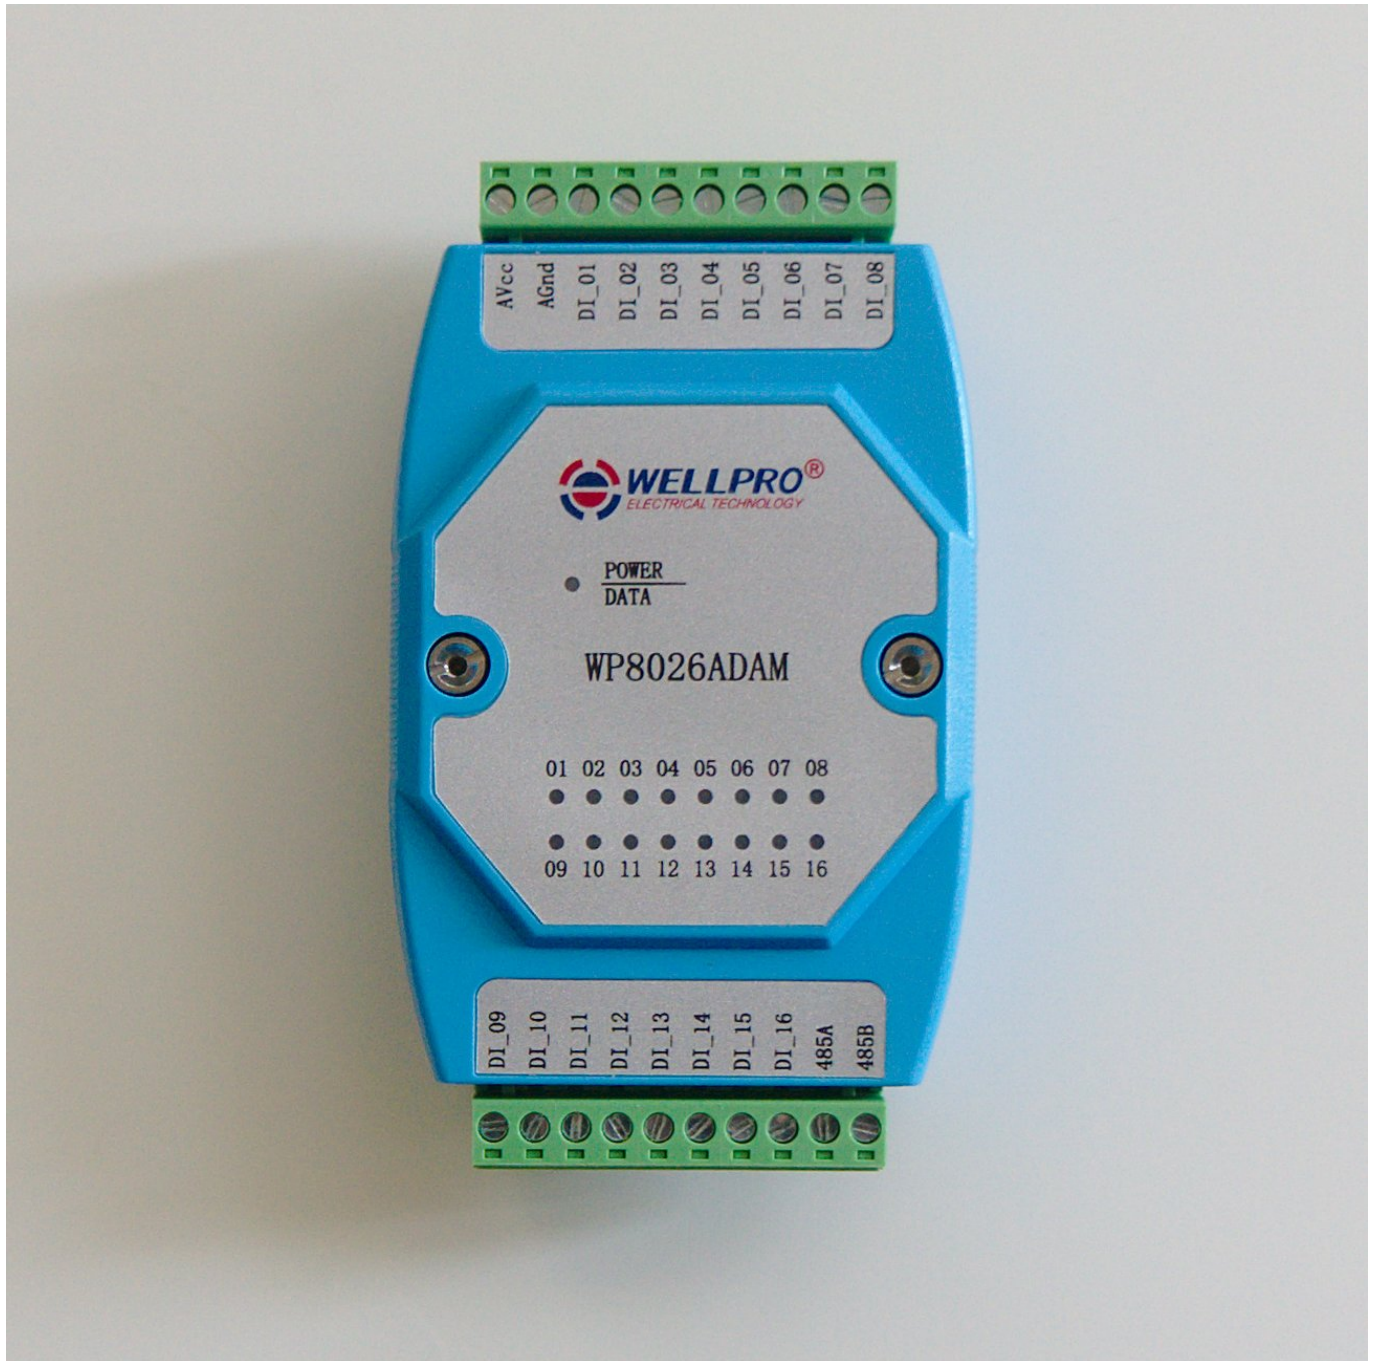 

- 16 digital inputs Modbus device
- DC 9V-30V/2W power supply
- 125x73x35mm

Default settings: 9600 baud, 8, N, 1

 
Digital input diagram:

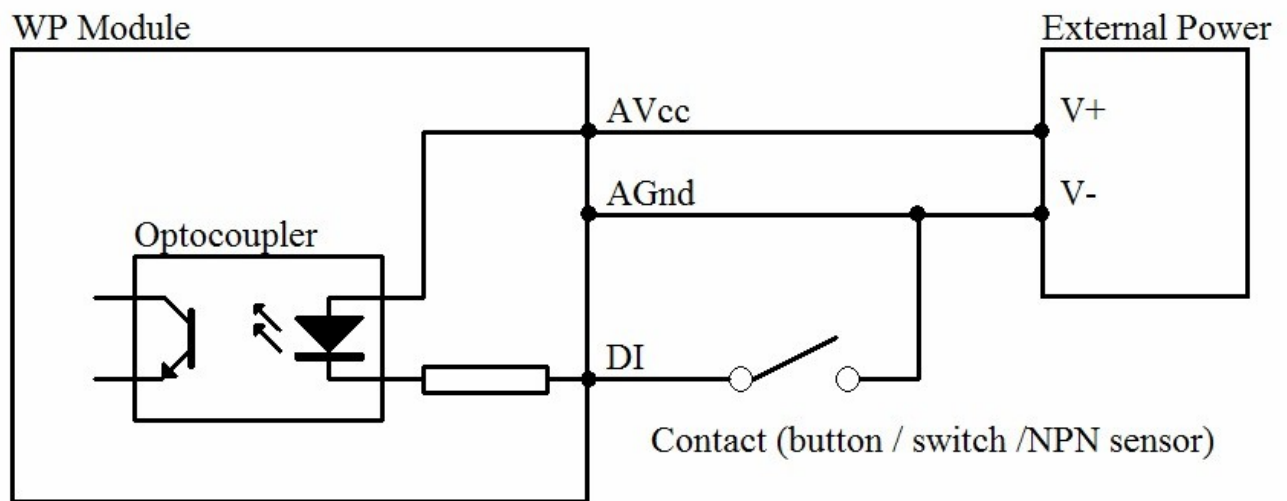**WP8027ADAM**



- 16 digital outputs Modbus device
- DC 9V-30V/2W power supply
- 125x73x35mm

 
Digital outputs diagram:

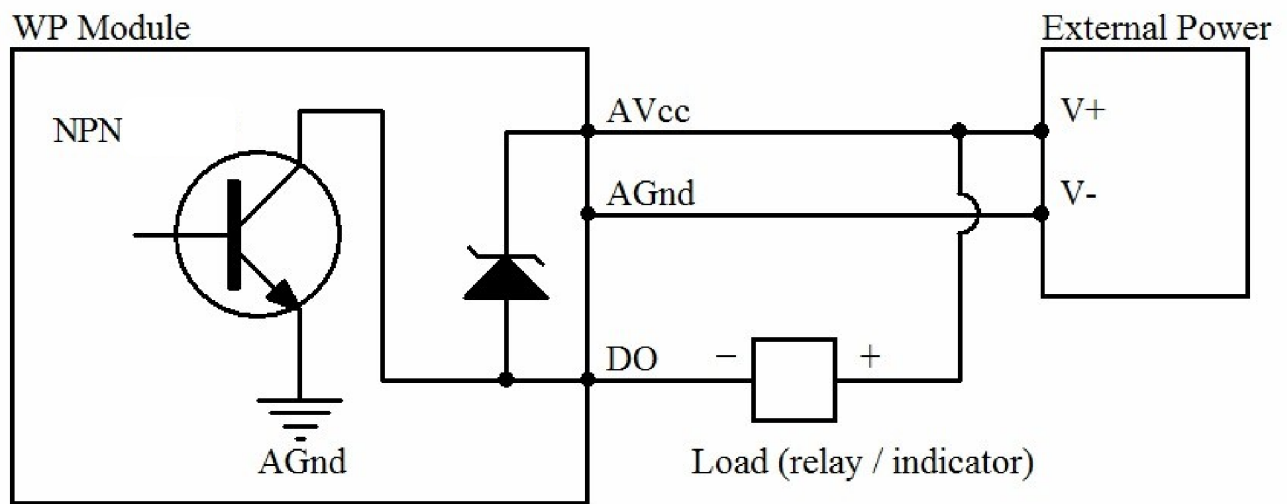**WP8028ADAM**




- 8 digital inputs, 8 digital outputs
- DC 9V-30V/2W power supply
- 125x73x35mm

 Digital inputs diagram:

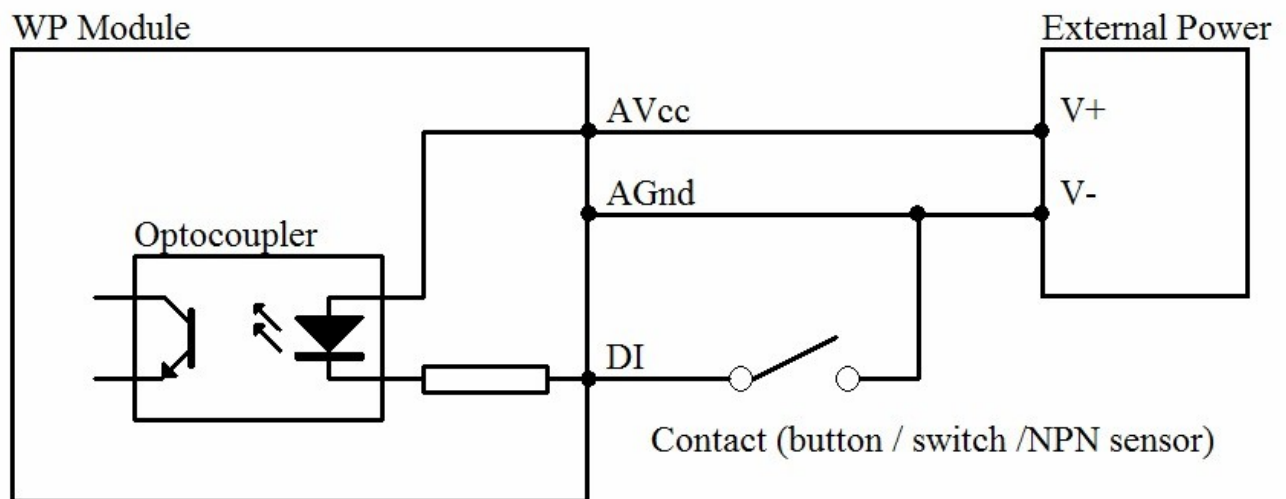

Digital outputs diagram:

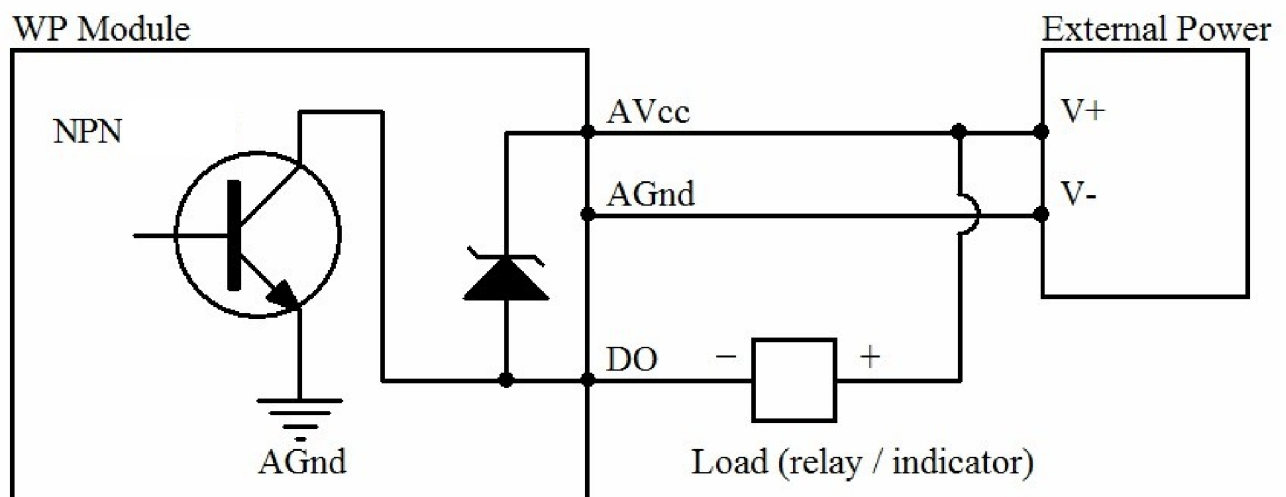 


WP9038ADAM




- 6 analog input channels, 4 digital output and 4 digital input channels
- Analog input type: DC 0-20mA/4-20mA
- Analog input accuracy: $\pm 0.02\text{mA}$
- External power supply: DC 9V-30V/2W
- 125x73x35mm

 
Digital inputs diagram:

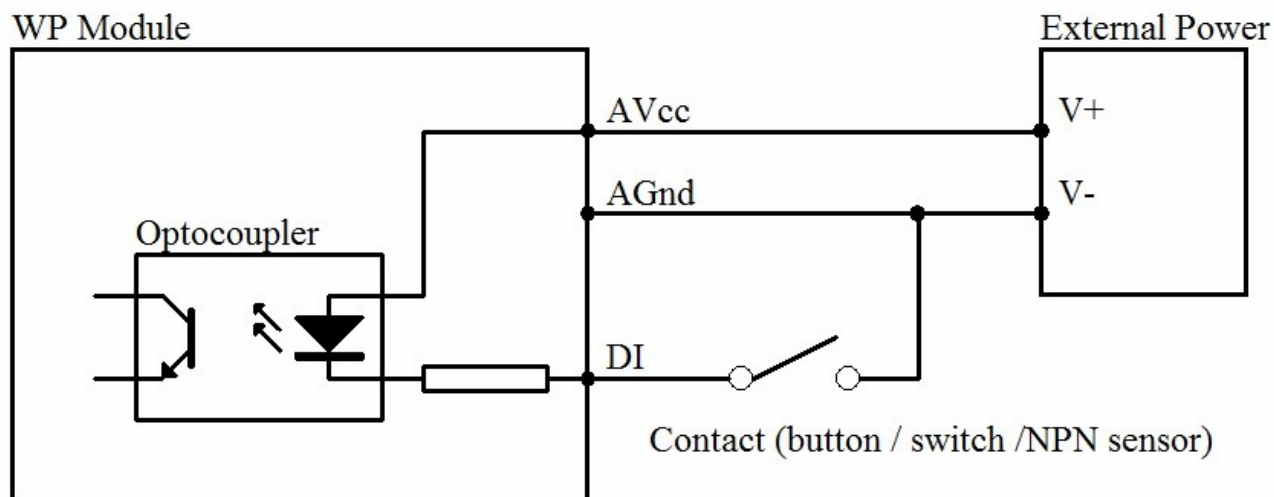

Digital outputs diagram:

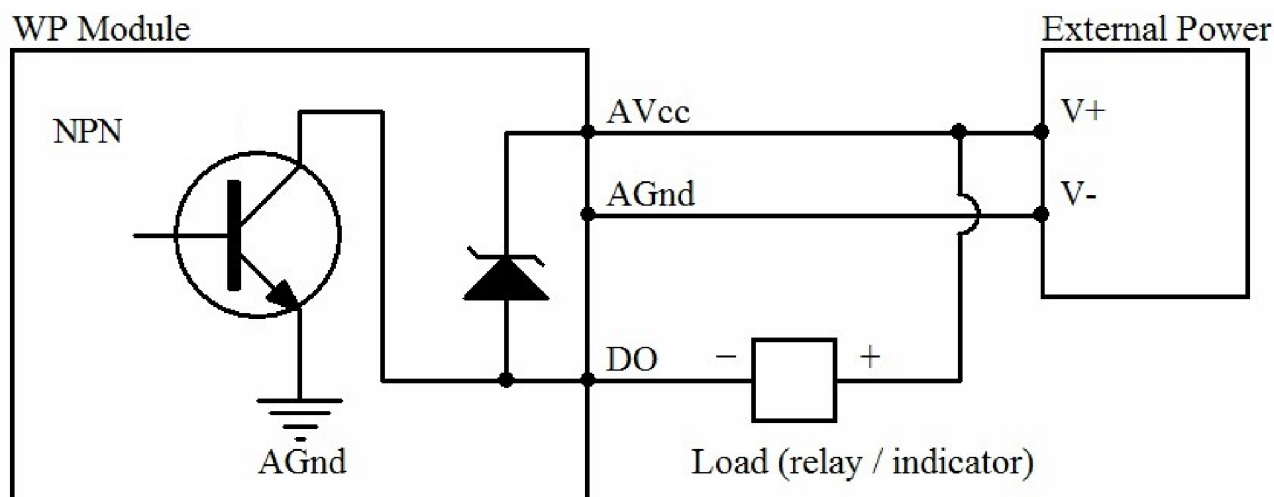 

Analog inputs diagram:

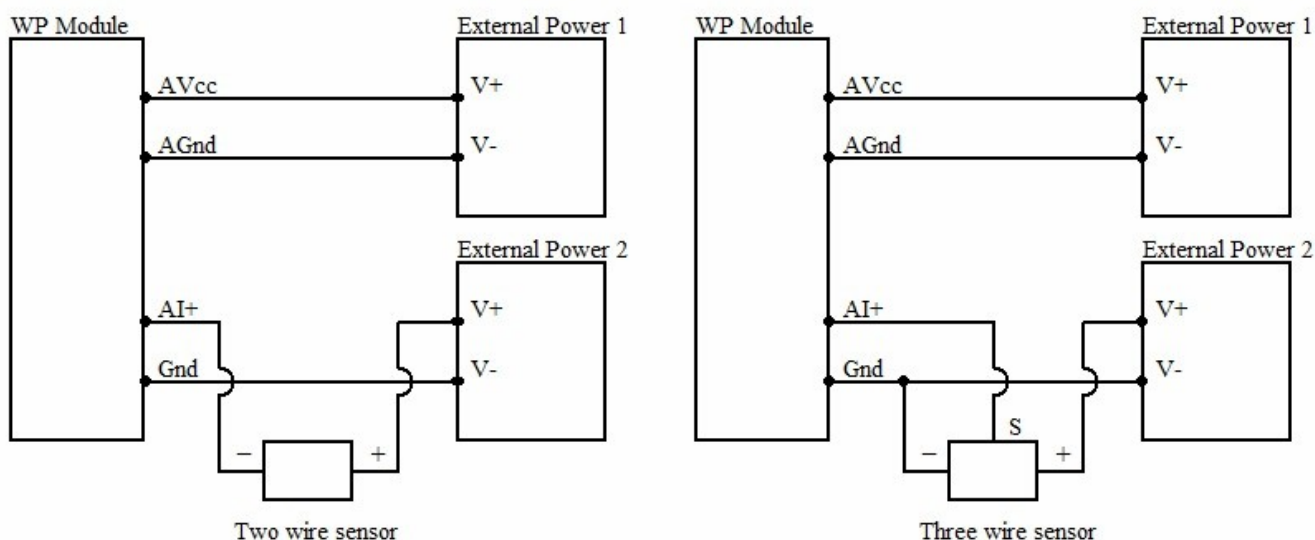 

The devices can be used by plugging them into the controller directly, and using the Hardware PLC / Config settings to control, or by plugging them into the host computer using a USB cable provided in the kit. The setup and the configuration dialogs are described in the [PLC/Modbus API](#) and [Host Modbus](#)

[API](#) manuals.

From:

<http://cnc42.com/> - **myCNC Online Documentation**

Permanent link:

http://cnc42.com/mycnc/modbus_devices?rev=1564688945

Last update: **2019/08/01 15:49**

