






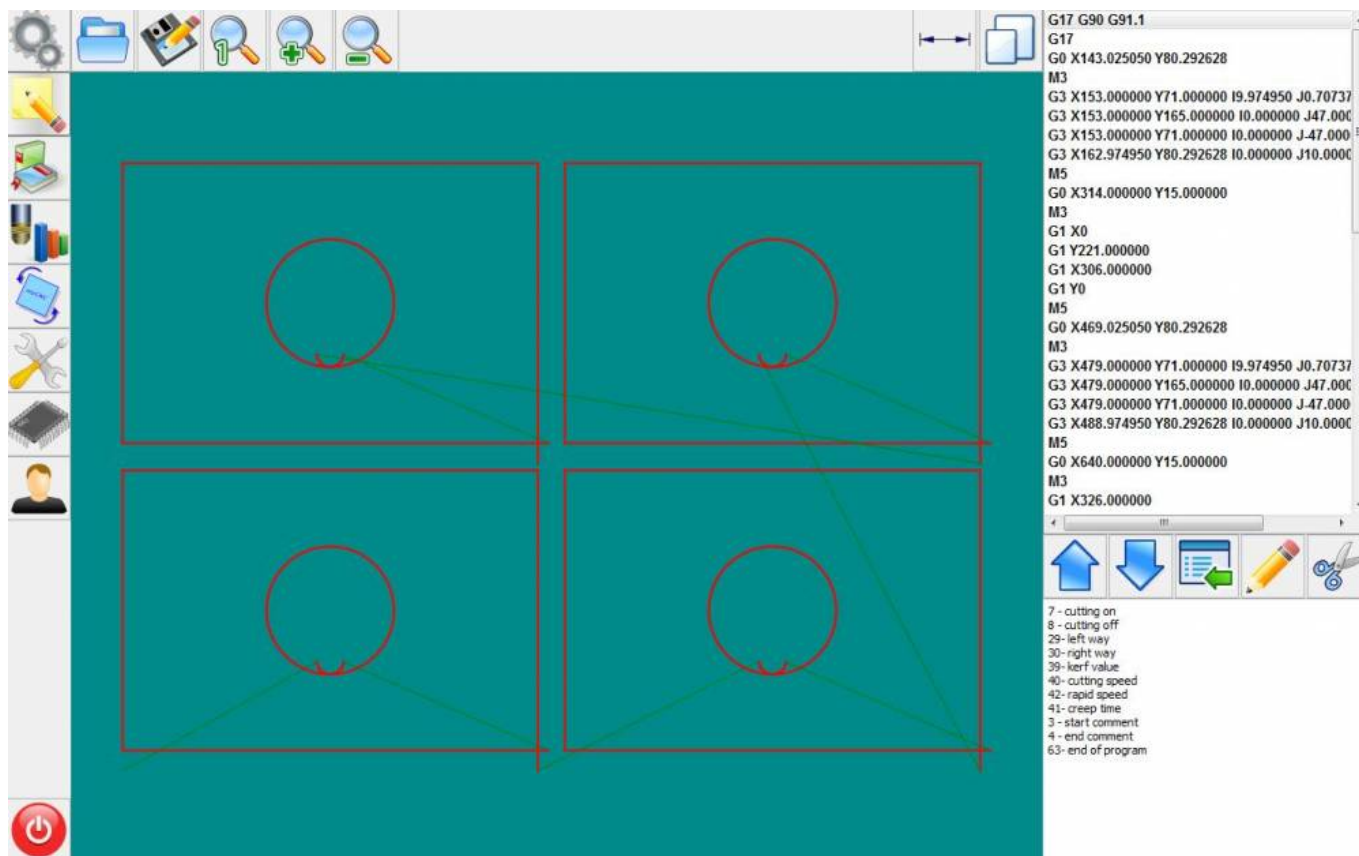


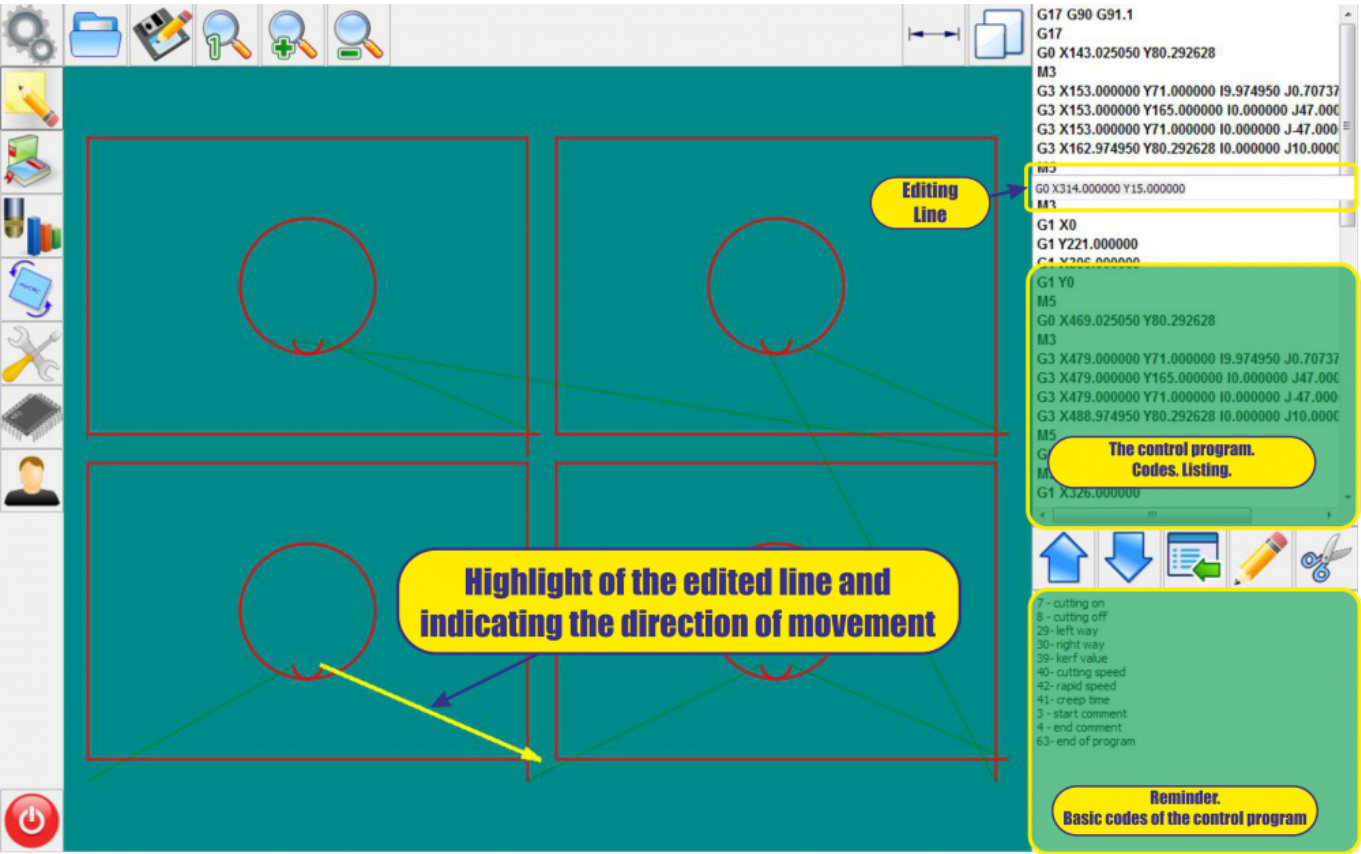
Main window of the editor of control programs



Cutting card management functions

	Selecting and opening a cutting layout for editing
	Saving the edited control program.
	Place the control program on the whole screen.
	Zoom in of the nesting chart
	Zoom out of the nesting chart
	Show dimensions of the nesting chart
	Show work area with nesting chart

Editor Functions








Editing Line

Highlight of the edited line and indicating the direction of movement

The control program. Codes. Listing.

Reminder. Basic codes of the control program

- 7 - cutting on
- 8 - cutting off
- 29 - left way
- 30 - right way
- 39 - kerf value
- 40 - cutting speed
- 42 - rapid speed
- 41 - creep time
- 3 - start comment
- 4 - end comment
- 63 - end of program

	Go to one line up the control program
	Go to one line down the control program
	Insert a new line. The insertion is performed above the selected row.
	Editing the selected line
	Cut the selected string to the new one.

From:
<http://docs.pv-automation.com/> - **myCNC Online Documentation**

Permanent link:
http://docs.pv-automation.com/mycnc/mycnc_editor

Last update: **2018/05/23 04:22**

