



# Change Screen resolution for Single Board Computer (Odroid-C2)

- Open File Manager (operator's Home icon)
- Goto **/boot** or **devices/boot** folder (which is actually the same)

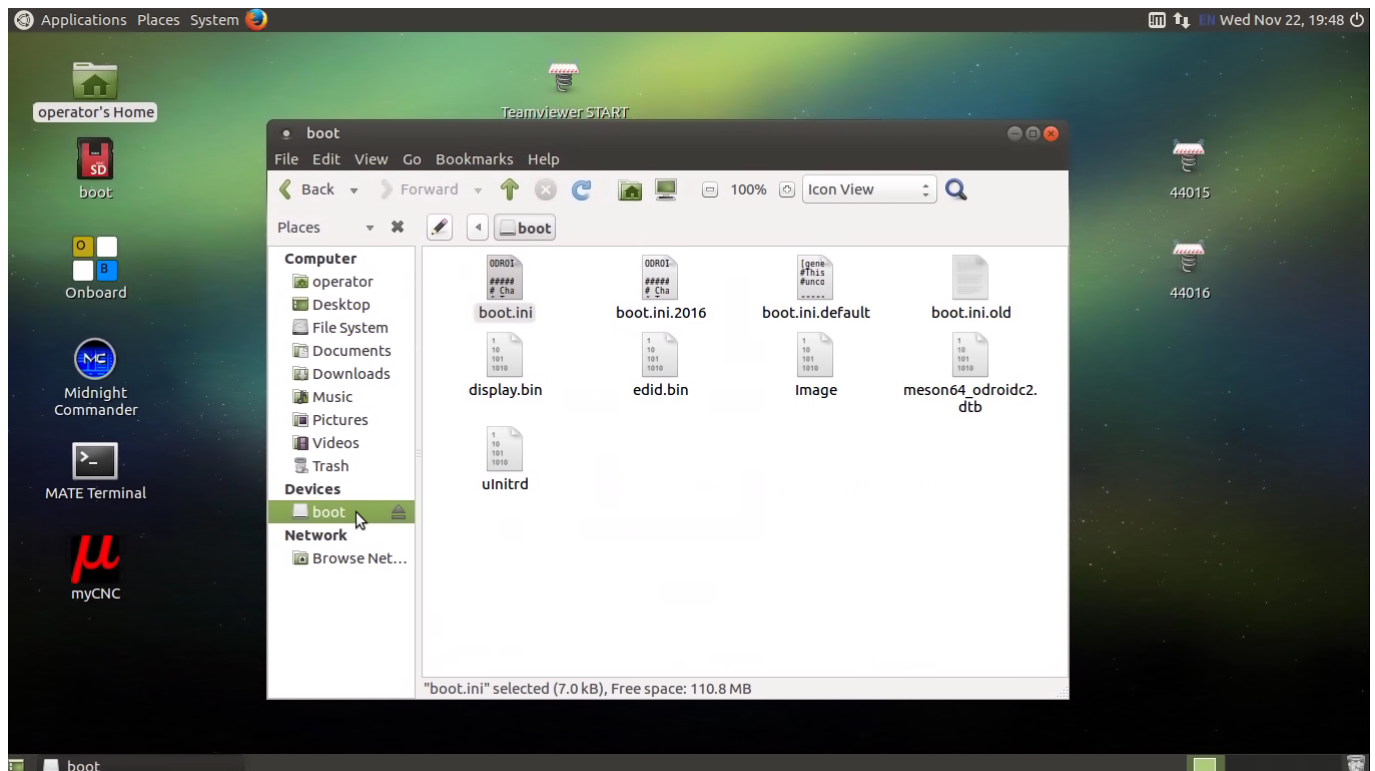


- Select **boot.ini**

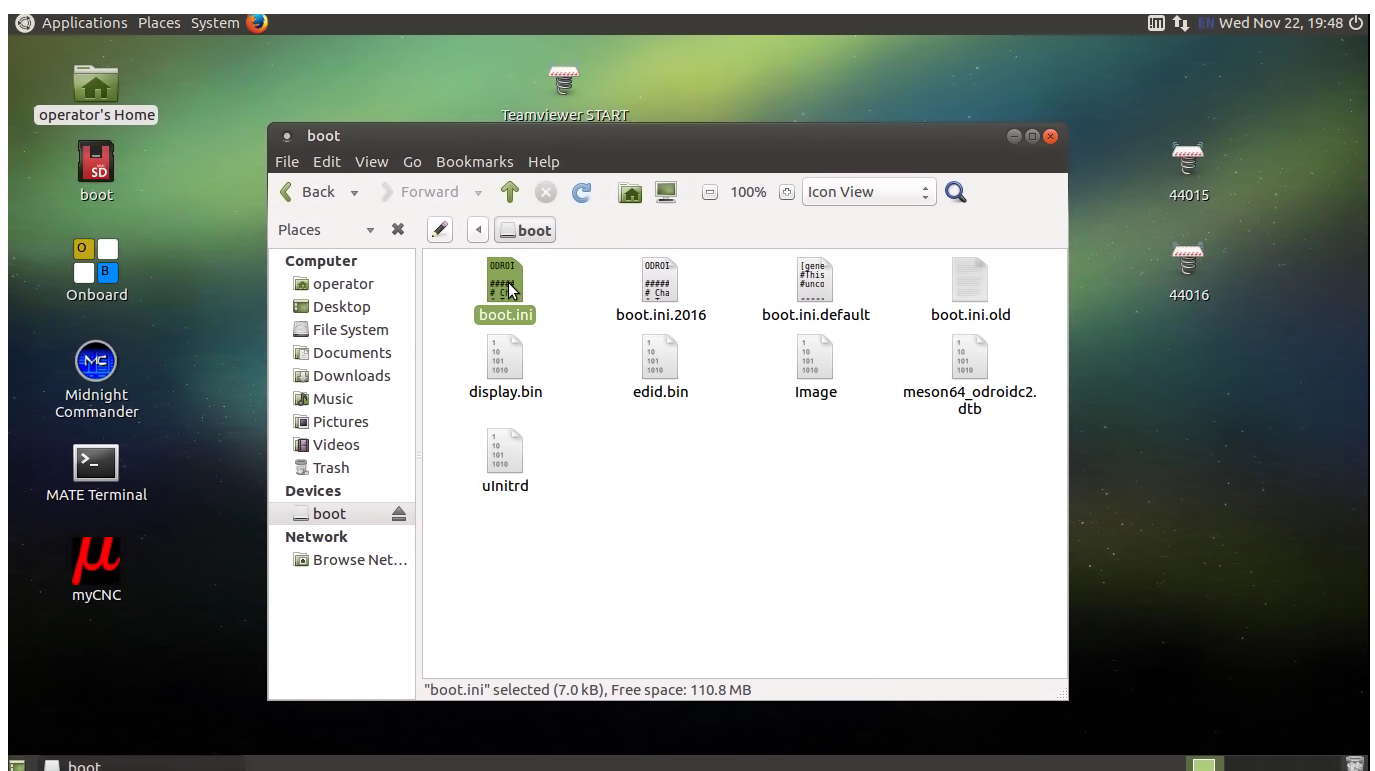


- Press Right mouse button on it and


- Select **Edit as Administrator**

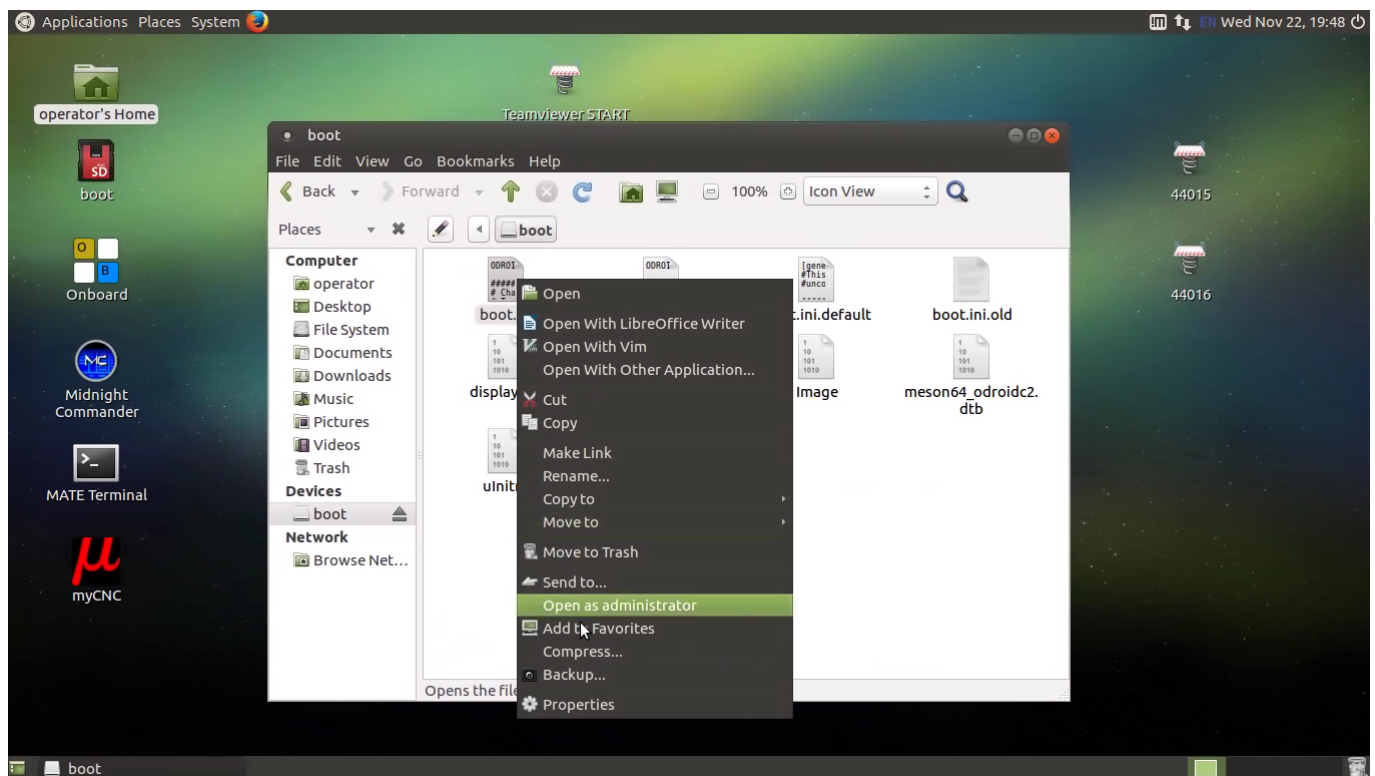

- Comment with symbol “#” current active line with resolution and

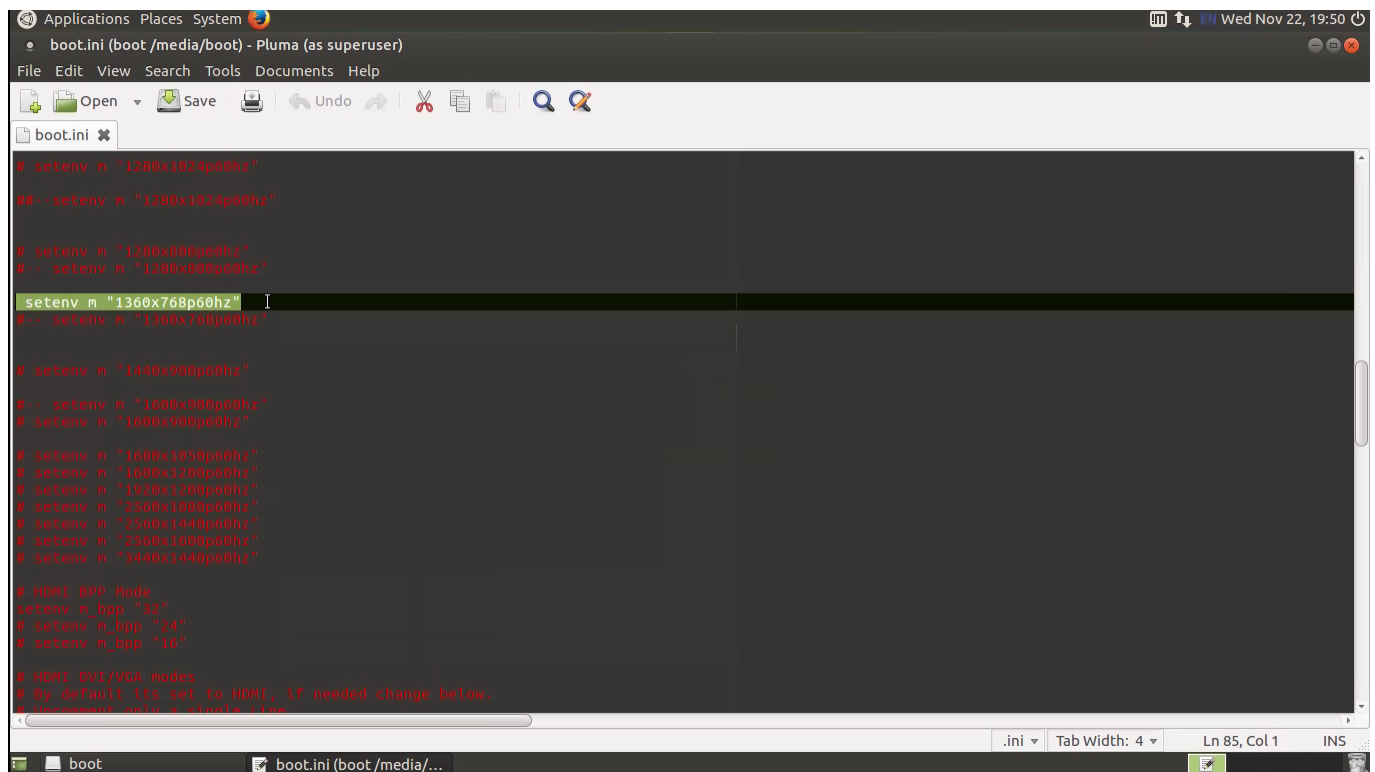

- Uncomment (remove symbol “#” from the start) in line with screen resolution you need

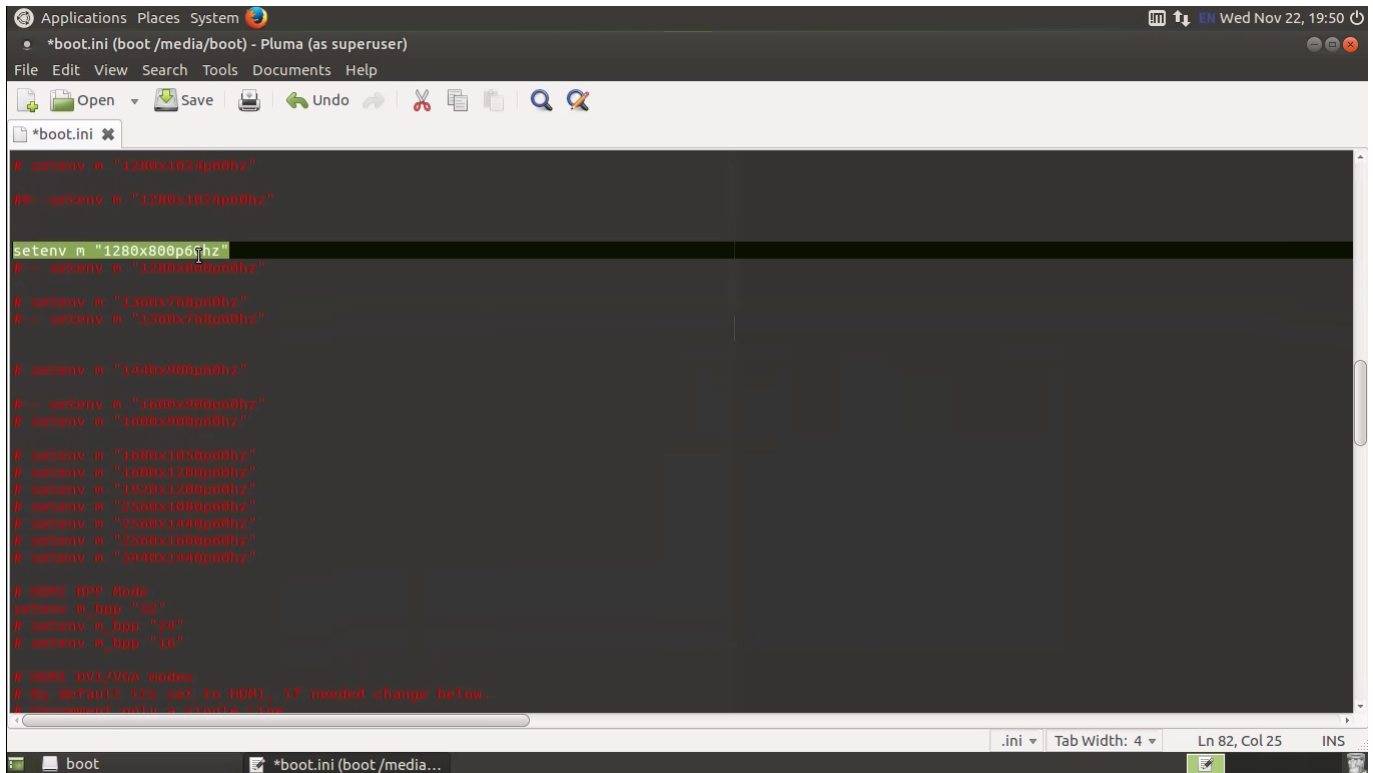

```
# setenv m "1280x1024p60hz"
## --setenv m "1280x1024p60hz"

setenv m "1280x800p60hz"
# -- setenv m "1280x800p60hz"
# setenv m "1360x768p60hz"
# -- setenv m "1360x768p60hz"

# setenv m "1440x900p60hz"
# -- setenv m "1600x900p60hz"
# setenv m "1600x900p60hz"

# setenv m "1600x1050p60hz"
# setenv m "1600x1200p60hz"
# setenv m "1920x1200p60hz"
# setenv m "2560x1080p60hz"
# setenv m "2560x1440p60hz"
# setenv m "2560x1600p60hz"
# setenv m "3440x1440p60hz"

# HDMI BPP Mode
setenv m_bpp "32"
# setenv m_bpp "24"
# setenv m_bpp "16"

# HDMI DVI/VGA modes
# By default it's set to HDMI. If needed change below.
# Document only a sample file
```

- Save changes
- Reboot computer

From:

<http://docs.pv-automation.com/> - **myCNC Online Documentation**

Permanent link:

[http://docs.pv-automation.com/mycnc/change\\_screen\\_resolution\\_for\\_single\\_board\\_computer\\_sbc](http://docs.pv-automation.com/mycnc/change_screen_resolution_for_single_board_computer_sbc)

Last update: **2017/11/22 22:15**

